

Bou'G! ^ 4 - c c V



PEUGEOT 308



7-inch touch screen

GPS satellite navigation - Multimedia audio - Bluetooth® telephone



	Contents
First steps	296
Steering mounted controls	299
Menus	300
Media	302
Radio	308
DAB (Digital Audio Broadcasting) radio	310
Music	312
Navigation	316
Navigation - Guidance	324
Traffic	328
Configuration	330
Connected services	340
PEUGEOT Connect Apps	341
Telephone	342
Frequently asked questions	350

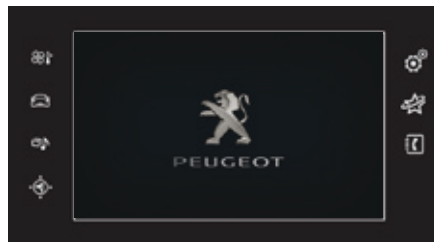
i The system is protected in such a way that it will only operate in your vehicle.

! As a safety measure, the driver should only carry out operations which require prolonged attention while the vehicle is stationary. The display of an energy economy mode message signals that electrical systems operating are going into standby. Refer to the energy economy mode section.


First steps

Use the buttons on either side of the touch screen for access to the menus, then press the virtual buttons in the touch screen.


Each menu is displayed in one or two pages (primary page and secondary page).



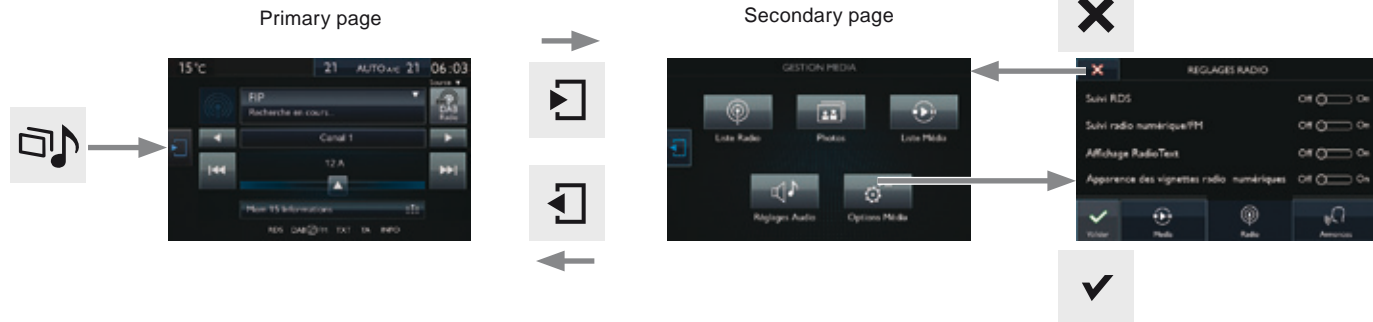i In very hot conditions, the system may go into stand-by (screen and sound completely off) for a minimum period of 5 minutes.




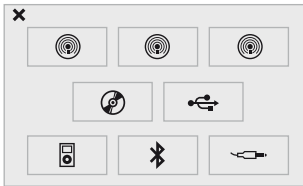Shortcuts: using virtual buttons in the top band of the touch screen, it is possible to go directly to the choice of audio source, the list of stations (or titles depending on the source) or to the temperature adjustment.



Selecting the audio source (depending on version):

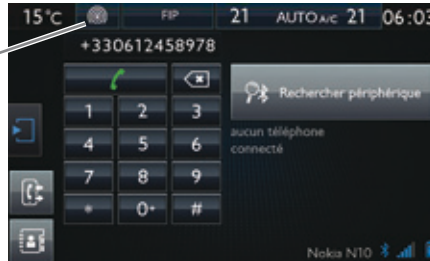- "FM" / "AM" / "DAB"* radio wavebands.
- "USB" memory stick.
- CD player (located in the glove box)*.
- Telephone connected by Bluetooth* and by Bluetooth* audio streaming.
- Media player connected to the auxiliary socket (jack, cable not supplied).



With the engine running, press to mute the sound.
With the ignition off, press to switch the system on.



Volume adjustment (each source is independent, including Traffic announcements (TA) and navigation instructions).



In very hot conditions, the volume may be limited to protect the system. The return to normal takes place when the temperature in the passenger compartment drops.

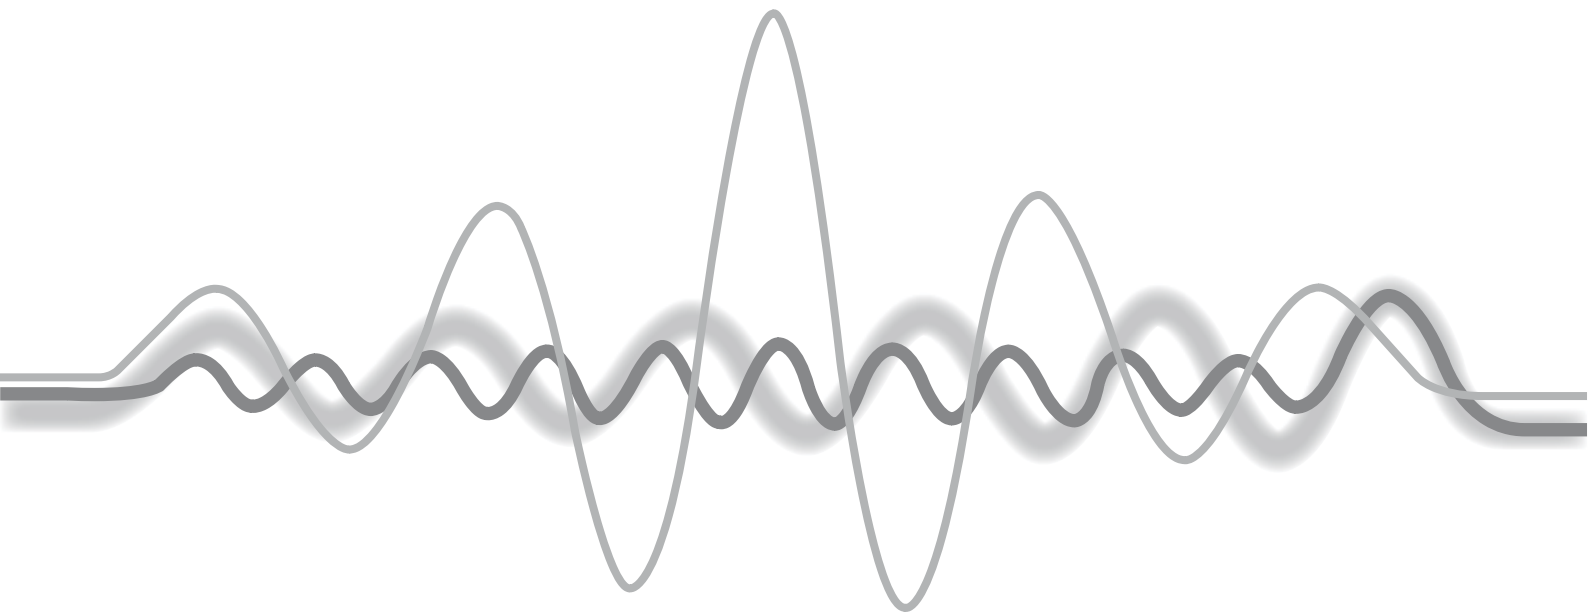


The screen is of the "resistive" type, it is necessary to press firmly, particularly for "flick" gestures (scrolling through a list, moving the map...). A simple swipe will not be enough. Pressing with more than one finger is not recognised. The screen can be used when wearing gloves. This technology allows use at all temperatures.



To clean the screen, use a soft non-abrasive cloth (spectacles cloth) without any additional product. Do not use pointed objects on the screen. Do not touch the screen with wet hands.

* Depending on equipment.



Steering mounted controls



Press: mute on / off.



Increase volume.



Decrease volume.

SRC

Change audio source: radio, media.



Radio, rotate: automatic search for the previous / next station.

Radio, press: preset stations.

Media, rotate: previous / next track.

Press: confirm a selection.



Telephone: start or answer a call.

Call in progress: telephone menu (end call, secret mode, hands-free mode).

Telephone, press and hold: reject an incoming call, end a call in progress; other than call in progress, telephone menu.

Radio: display the list of stations.

Media: display the list of tracks.

Radio, press and hold: update the list of stations received.

Menus



Air conditioning



Control of the settings for temperature and air flow.



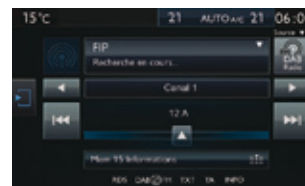
Driving assistance



Access to the trip computer. Activate, deactivate, adjust settings for certain vehicle functions.



Media



Select an audio source, a radio station, display photographs.



Navigation

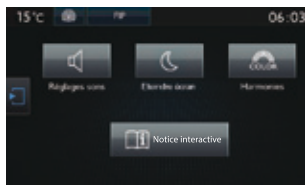
(Depending on equipment)



Enter navigation settings and choose a destination.



Configuration



Adjust settings for audio (balance, ambience, ...), colour scheme, brightness of the instruments and controls, display (language, units, date, time, ...) and access the interactive help for the vehicle's main systems and warning lamps.



Connected services

(Depending on equipment)

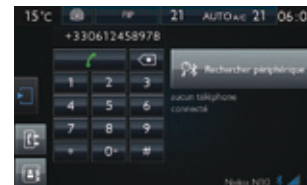


PEUGEOT CONNECT APPS

Connect to an applications portal to facilitate, make safe and personalise journeys by means of a connection key available on subscription from a PEUGEOT dealer.

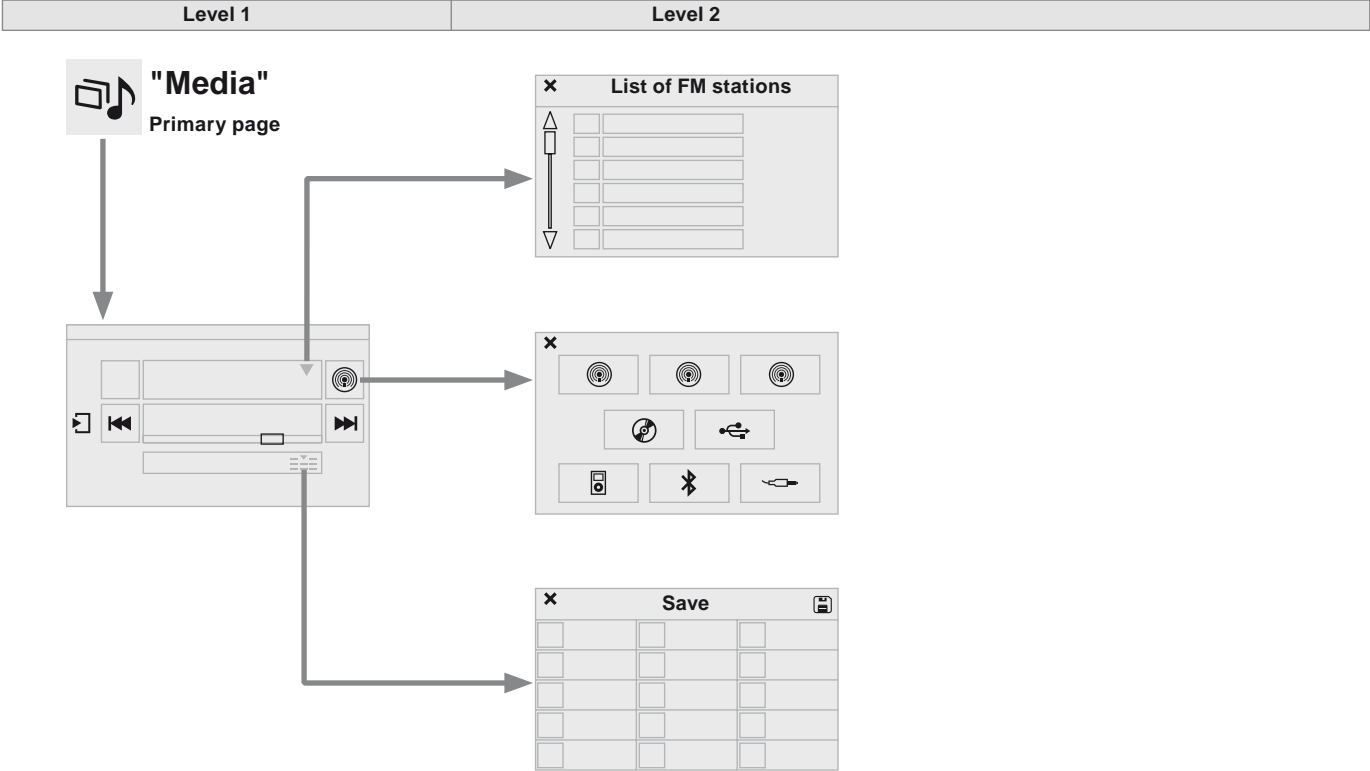


















Telephone

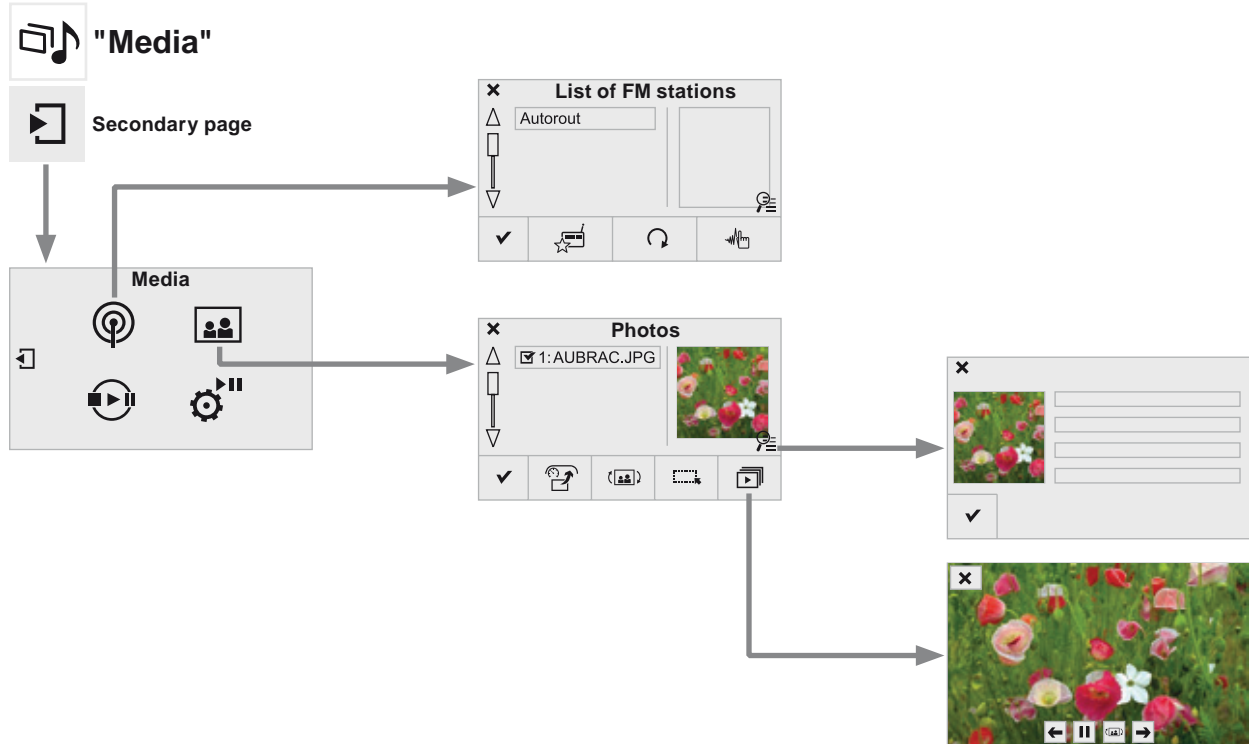




















Connect a telephone by Bluetooth®.

Media



Level 1		Level 2		Comments
 	Media ↓ List		List of FM stations	Press on a radio station to select it.
 	Media ↓ Source	 Radio FM	FM Radio	Select change of source.
		 Radio DAB	DAB Radio	
		 Radio AM	AM Radio	
			CD	
			USB	
			iPod	
			Bluetooth	
			AUX	
 	Media ↓ Save			Press on an empty location then on "Save".








Level 1		Level 2		Level 3		Comments
  	Media ↓ Secondary page ↓ Radio list	 Save				Press on a radio station to select it.
		 Update list				Update the list of stations received.
		 Frequency				Enter the desired radio frequency.
		 Confirm				Save the settings.
  	Media ↓ Secondary page ↓ Photos	 Page selection				Display the selected photo full screen.
		 Rotate				Rotate the photo 90°.
		 Select all				Select all the photos in the list. Press again to deselect.
		 Slideshow	 Previous photo.			Display the photos in sequence, full screen.
			 Pause / Play.			
			 Next photo.			
	 Confirm					Save the settings.









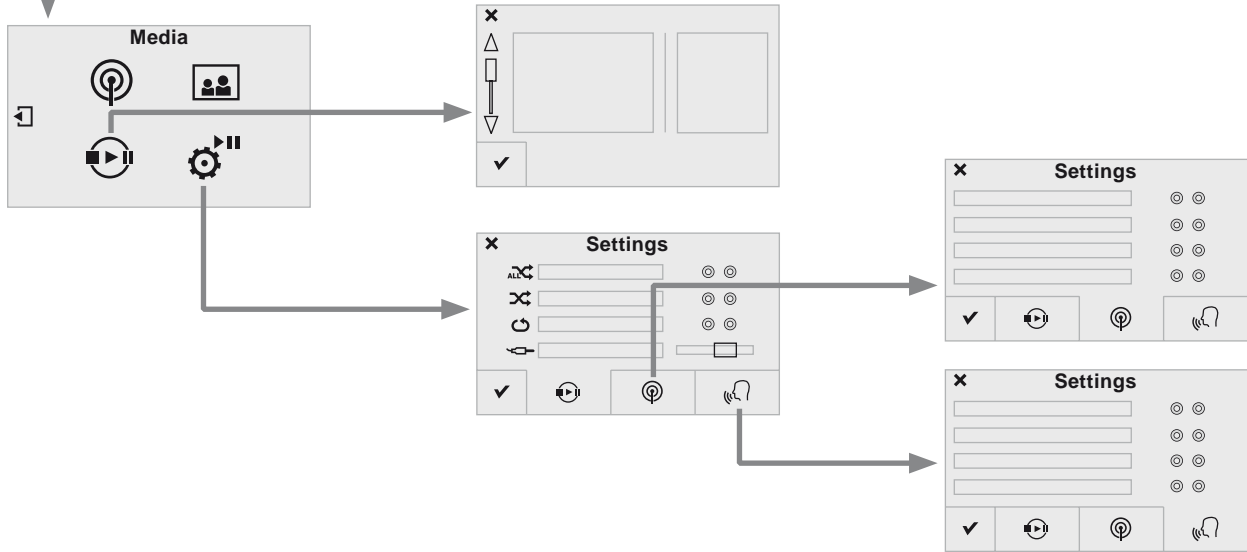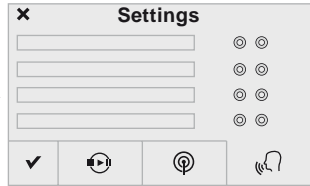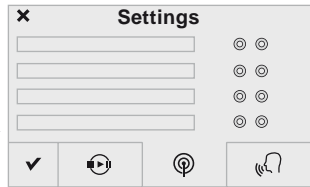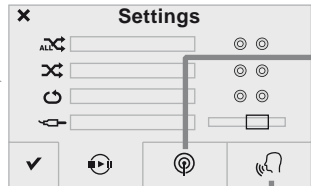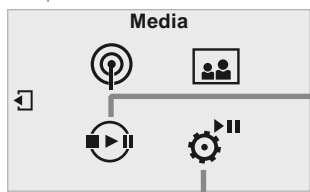







"Media"



Secondary page



Level 1		Level 2		Level 3		Comments
  	Media ↓ Secondary page ↓ Media list					Presentation of the last media used.
  	Media ↓ Secondary page ↓ Settings		Media ↓ Settings	 Shuffle (all tracks)	Choose the play settings.	
				 Shuffle (current album)		
				 Repeat		
				 Aux. amplification		
			Radio ↓ Settings	<input type="checkbox"/> RDS options	Activate or deactivate the options.	
				<input type="checkbox"/> DAB/FM station tracking		
				<input type="checkbox"/> Display Radio Text		
				<input type="checkbox"/> Digital radio slideshow display		
			Announcements ↓ Settings	<input type="checkbox"/> Traffic announcements (TA)	Activate or deactivate the options.	
				<input type="checkbox"/> Weather		
				<input type="checkbox"/> Sport - Programme info		
				<input type="checkbox"/> Alert settings		
			Confirm			

Radio

Selecting a station



Press on **Media** to display the primary page.

or



Press on **Media** to display the primary page then go to the secondary page.

 


Select "**List**" in the primary page.

or



Select "**Radio list**" in the secondary page.



Select a radio station from the list offered.

 


Select "**Update list**" to refresh the list.

OR



Press on **Media** to display the primary page then select "**Save**".



Select a preset radio station in the list.



If necessary, select change of source.



Select "**FM Radio**" or "**AM Radio**".

 


The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.


Changing a radio frequency



Press on **Media** to display the primary page.



By automatic frequency search

 

Press ◀ or ▶ to move the cursor for an automatic search down or up for a radio frequency.

OR



Press on **Media** to display the primary page then press on the secondary page.



Press on "**Enter frequency**" to display the primary page then press on the secondary page.

THEN

Select the change of source.



Select "**FM Radio**" or "**AM Radio**".

**OR**

Enter the frequency in full (e.g.: 92.10 MHz) using the keypad then "**Confirm**".

FRANCE BLEU

By alphabetical list

Press the current radio band then choose the radio station from the list offered.

Preset a station

Select a radio station or frequency (refer to the corresponding section).



Press on "**Save**".

Mémoire 1

Select a number in the list to preset the previously chosen radio station.

A long press on a number presets (memorises) the station.

Or



A press on this button presets all of the stations one after the other.

Recall preset stations

Press on **Media** to display the primary page then select "**Save**".

**Activate/ Deactivate RDS**

Press on **Media** to display the primary page then go to the secondary page.



Select "**Settings**".



Select "**Radio**".

Off On

Activate/deactivate "**RDS options**".

i RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100% of the territory. This explains the loss of reception of the station during a journey.

DAB (Digital Audio Broadcasting) radio

The screenshot shows a car radio interface with the following elements and annotations:

- 15°C**: Temperature display.
- 21 AUTO A/C 21 06:03**: Climate control and time display.
- Source**: Dropdown menu for audio source selection.
- FIP Recherche en cours...**: Current station name and status.
- Canal 1**: Current multiplex name.
- 12 A**: Current frequency.
- Mem 15 Informations**: Preset stations menu.
- RDS DAB FM TXT TA INFO**: Radio mode and information options.

Annotations and their descriptions:

- Display of the name of the current station.**: Points to the station name 'FIP'.
- Short-cut: access to the choice of audio source, the list of stations (or titles depending on the source) or temperature adjustment.**: Points to the 'Source' dropdown.
- Select the radio station.**: Points to the 'Source' dropdown.
- Select the audio source. Display the "DAB" band.**: Points to the 'DAB' icon in the top right.
- Display of "Radiotext" for the current station.**: Points to the 'Recherche en cours...' text.
- Next "Multiplex". Next radio station.**: Points to the right arrow button.
- Previous "Multiplex". Previous radio station.**: Points to the left arrow button.
- Secondary page.**: Points to the left arrow button.
- Any thumbnail broadcast by the station.**: Points to the radio icon in the top left.
- Display the name and number of the multiplex service being used.**: Points to the 'Canal 1' display.
- Display of options: if active but not available, the display will be greyed out, if active and available, the display will be blank.**: Points to the 'RDS DAB FM TXT TA INFO' bar.
- Preset stations, buttons 1 to 15. Short press: select the preset radio station. Long press: preset a radio station.**: Points to the 'Mem 15 Informations' button.

Display of options:
if active but not available, the display will be greyed out,
if active and available, the display will be blank.

i If the "DAB" radio station being listened to is not available on "FM", the "DAB FM" option is greyed out.



! Journaline® is a text-based information service designed for digital radio systems. It provides text-based information structured around topics and sub-topics. This service is available from the "LIST OF DAB STATIONS" page.

DAB (Digital Audio Broadcasting) Digital radio

! Digital radio provides higher quality reception and also the graphical display of current information on the radio station being listened to. Select "List" in the primary page.
The range of multiplexes available is displayed in alphabetical order.



Press on **Media** to display the primary page.



Select change of source.



Select "**DAB Radio**".



Select "**List**" in the primary page.

or



Select "**Radio list**" in the secondary page.

Select the radio station from the list offered.

Digital radio - DAB / FM auto tracking

i "DAB" does not cover 100% of the territory.
When the digital radio signal is weak, "DAB/FM station tracking" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).



Press **Media** to display the primary page then press on the secondary page.



Select "**Settings**".



Select "**Radio**".

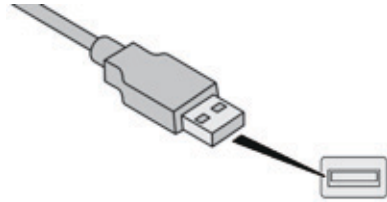
Off On Select "**Digital/FM auto tracking**" then "**Confirm**".

i If "DAB/FM station tracking" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.
When the digital signal is restored, the system automatically changes back to "DAB".

! If the "DAB" station being listened to is not available on "FM" ("**DAB/FM**" option greyed out), or "DAB/FM station tracking" is not activated, the sound will cut out while the digital signal is too weak.

Music

USB player



Insert the USB memory stick into the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

! To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or on connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

Auxiliary socket (AUX)



This source is only available if the "Auxiliary socket" option has been activated in the "Media" settings.

Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

Display and management of the controls are via the portable device.

CD player

Insert the CD in the player.

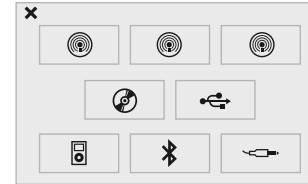
Selecting the source



Press on **Media** to display the primary page.



Select change of source.



Choose the source.



The steering mounted **SRC** (source) button can be used to go to the next media source, available if the source is active.



Press **OK** to confirm the selection.

Information and advice

The audio system will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode. No other type of file (.mp4, etc.) can be played. ".wma" files must be of the standard wma 9 type. The sampling rates supported are 32, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using of special characters (e.g. " " ? ; ù) to avoid any playing and displaying problems.


In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.


If the disc is recorded in another format it may not be played correctly.


It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

Use only USB memory sticks formatted FAT 32 (file allocation table).

 To protect the system, do not use a USB hub.

 It is recommended that the USB cable for the portable device is used.

 The system supports USB mass storage devices, BlackBerry® devices or Apple® players via USB ports. The adaptor cable is not supplied. Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).

Bluetooth® audio streaming

Streaming allows audio files on your telephone to be played through the vehicle's speakers.

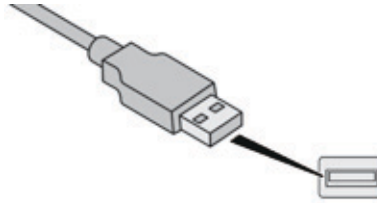
Connect the telephone: see the "**Telephone**" section, then "**Bluetooth**".
Choose the "**Audio**" or "**All**" profile.

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the peripheral device or by using the audio system buttons.

- ! Once connected in streaming mode, the telephone is considered to be a media source.
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

Connecting Apple® players




Connect the Apple® player to the USB port using a suitable cable (not supplied).
Play starts automatically.

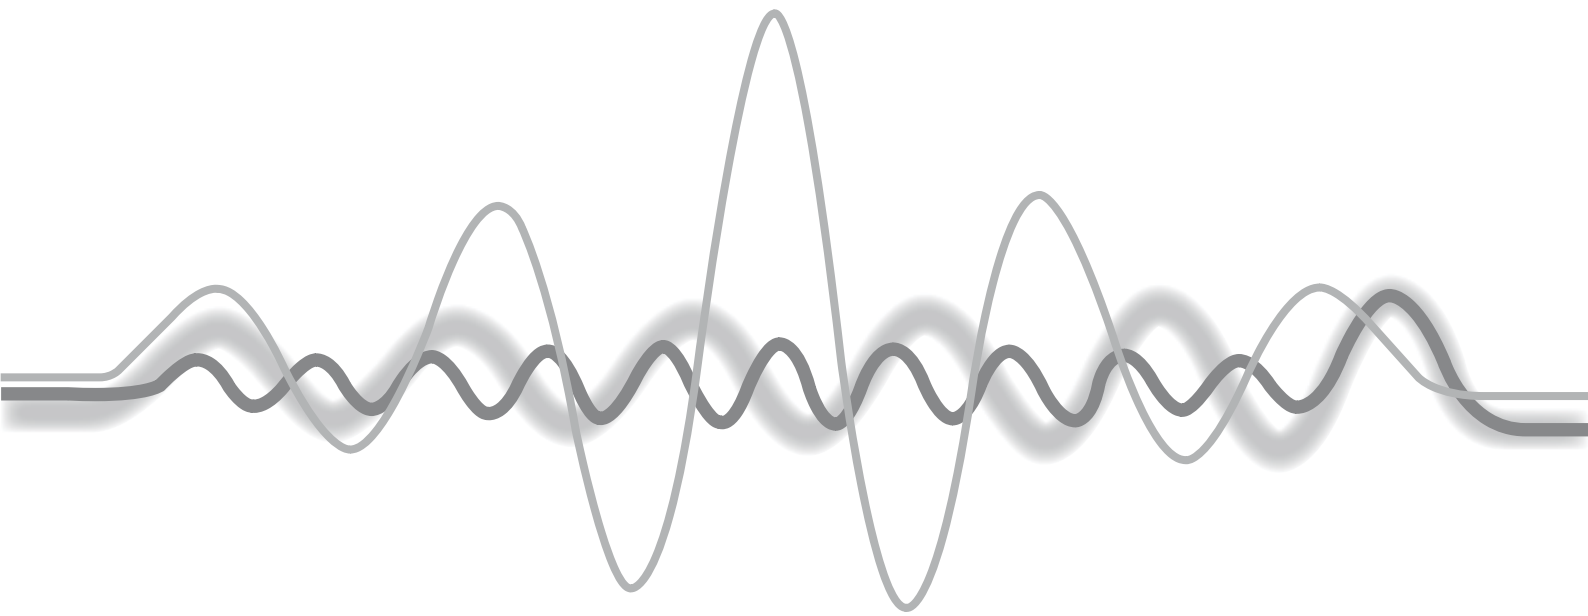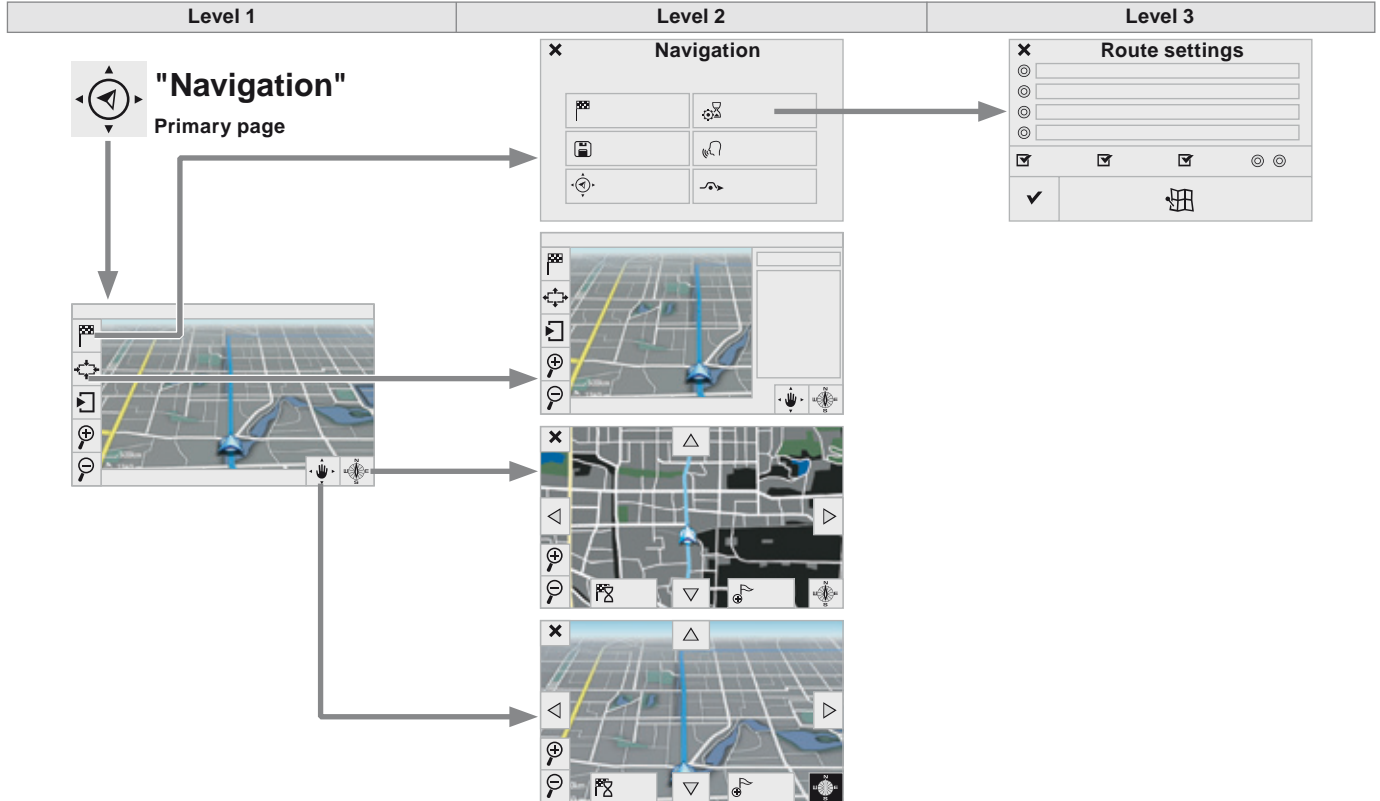
Control is via the audio system.

























- i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

 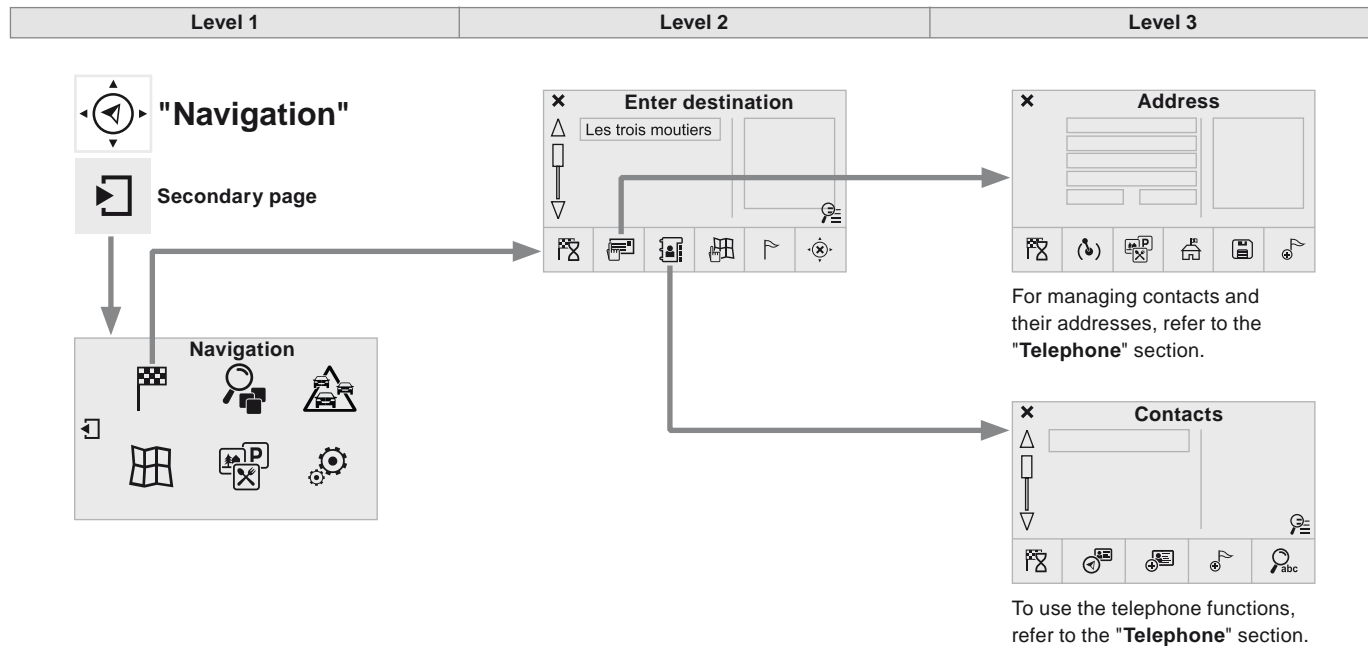
The version of software in the audio system may not be compatible with the generation of your Apple® player.









 
 



 








Navigation

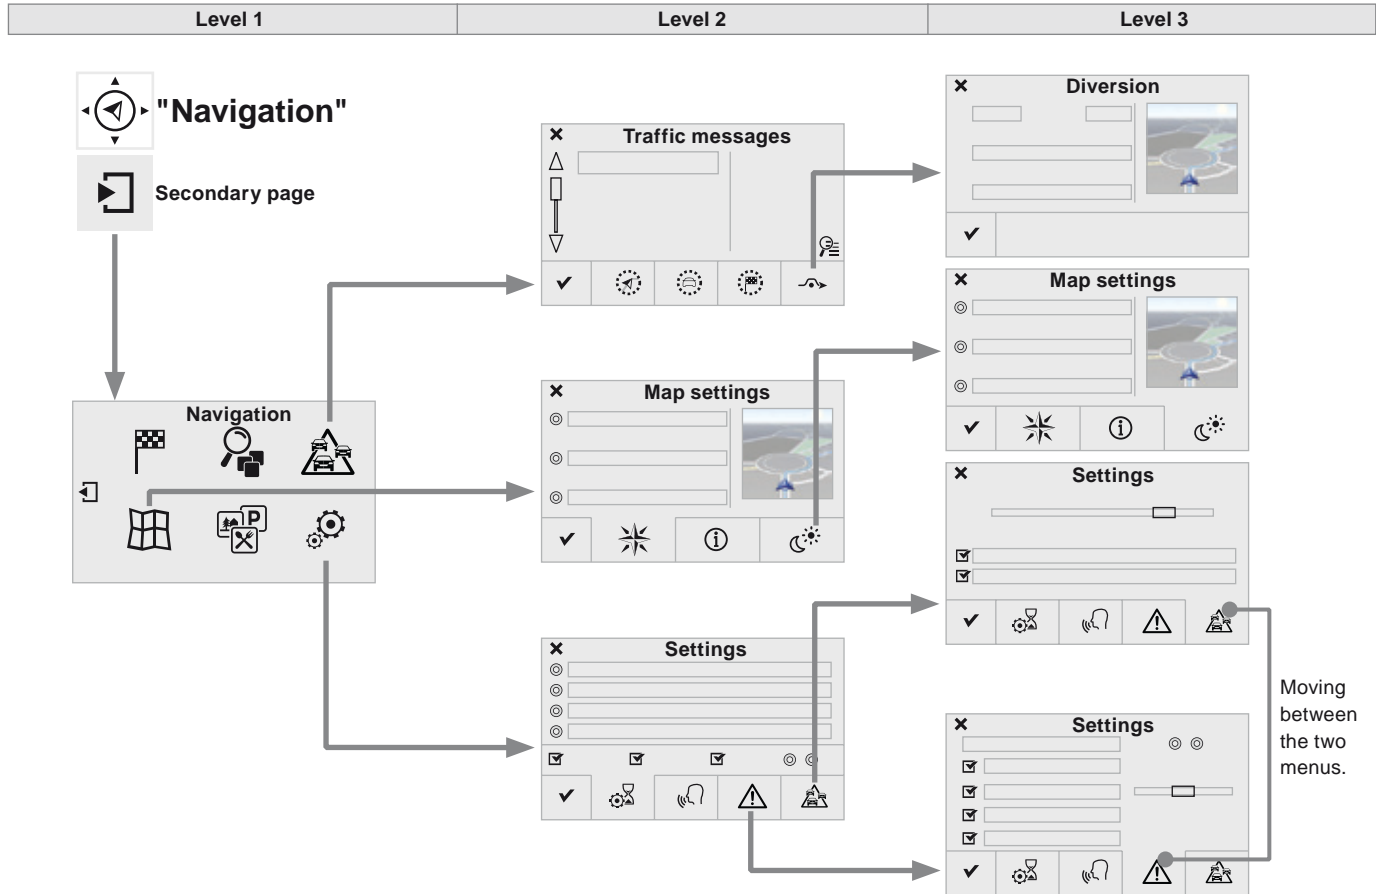






















Level 1	Level 2		Level 3		Comments
  <p style="text-align: center;">Navigation ↓ Settings Navigation</p>		Enter destination			Display recent destinations.
		Route settings		Fastest	Choose the navigation criteria. The map displays the route chosen according to these criteria.
				Shortest	
				Time/distance	
				Ecological	
				Tolls	
				Ferries	
				Strict-Close	
				Show route on map	
			Confirm	Save the options.	
	Save			Save the current address.	
	Stop navigation			Delete the navigation information.	
	Voice			Choose the volume for voice and announcement of street names.	
	Diversion			Detour from your initial route by a certain distance.	
 <p style="text-align: center;">Navigation</p>				Display in text mode	
				Zoom in.	
				Zoom out.	
					Display in full screen mode. Use the arrows to move the map.
				Switch to 2D map.	



Level 1		Level 2		Level 3		Comments
  	<p style="text-align: center;"> Navigation ↓ Secondary page ↓ Enter destination </p>		Address		Current loc.	Address settings
					Point of interest	
					Town center	
					Save	Save the current address.
					Add waypoint	Add a waypoint to the route.
					Navigate to	Press to calculate the route.
			Contacts		Addresses	Select a contact then calculate the route.
					Add contact	
					Add waypoint	
					Search for contact	
	Navigate to					
	On the map		Display the map and zoom to view the roads.			
	Itinerary		Create, add or delete a waypoint or view the itinerary.			
	Stop		Delete navigation information.			
	Navigate to		Press to calculate the route.			

Level 1		Level 2		Level 3	Comments
  	Navigation ↓ Secondary page ↓ Search for POI	 All POIs		List of categories available. After choosing the category, select the points of interest.	
		 Motor			
		 Dining/hotels			
		 Personal			
		 By name			
		 Search		Save the settings.	
  	Navigation ↓ Secondary page ↓ Show POIs	 Select all		Choose the display settings for POIs.	
		 Delete			
		 Import POIs			
		 Confirm		Save the options.	



Level 1		Level 2		Level 3		Comments	
  	Navigation ↓ Secondary page ↓ Traffic messages	 On the route				Settings for the choice of messages and the filter radius.	
		 Around vehicle					
		 Near destination					
		 Detour	<input type="radio"/>	Detour over a distance	<input type="radio"/>		Recalculate route
		<input checked="" type="checkbox"/> Finish					
  	Navigation ↓ Secondary page ↓ Map settings	 Orientation		<input type="radio"/>	Flat view north heading	Choose the display and orientation of the map.	
				<input type="radio"/>	Flat view vehicle heading		
				<input type="radio"/>	Perspective view		
		 Maps					
		 Aspect	<input type="radio"/>	"Day" map colour	<input type="radio"/>		"Night" map colour
			<input type="radio"/>	Automatic day/night			
		<input checked="" type="checkbox"/> Confirm					
  	Navigation ↓ Secondary page ↓ Settings	 Route settings				Enter settings and choose the volume for the voice and announcement of street names.	
		 Voice					
		 Alarm!					
		 Traffic options					
		<input checked="" type="checkbox"/> Confirm					Save your selections.

Navigation - Guidance

Choosing a new destination

Towards a new destination



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**Address**".



Select the "**Country**:" from the list offered, then in the same way the "**City**:" or its post code, the "**Road**:", the "**N**°:". Confirm each time.



Select "**Save**" to save the address entered as a contact entry. The system allows up to 200 entries.



Select "**Navigate to**".



Choose the navigation criteria: "**Fastest**" or "**Shortest**" or "**Time/distance**" or "**Ecological**".



Choose the restriction criteria: "**Tolls**", "**Ferries**", "**Traffic**", "**Strict**", "**Close**".



Select "**Confirm**".

Or



Press on "**Show route on map**" to start navigation.



To delete navigation information, press on "**Settings**".



Press on "**Stop navigation**".



To resume navigation press on "**Settings**".



Press on "**Resume guidance**".

Towards a recent destination



 
Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select an address from the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

Towards a contact



To be able to use navigation "towards a contact in the directory", it is first necessary to enter the address for your contact.



Press on **Navigation** to display the primary page.



 
Press on the secondary page.



Select "**Enter destination**".



Select "**Contacts**".



Select a destination from the contacts in the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" to start navigation.

Towards GPS coordinates



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**Address**".



Enter the "**Longitude**:" then the "**Latitude**:".



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

Towards a point on the map



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**On the map**".

Zooming in on the map shows points with information.

A long press on a point opens its content.

Towards points of interest (POI)

Points of Interest (POI) are listed in different categories.



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Search for POI**".



Select "**All POIs**".

Or



"**Motor**",

Or



"**Dining/hotels**".

i An annual mapping update allows new points of interest to be presented to you.
You can also update the Risk areas / Danger areas every month.
The detailed procedure is available on:
<http://peugeot.navigation.com>.

Risk areas / Danger zone alert settings



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Alarm!**" (Alert).

It is then possible to activate Risk areas alerts then:

- "Audible warning"
- "Alert only when navigating"
- "Alert only for overspeed"
- "Display speed limits"
- Timing: the choice of timing allows the time before giving a Risk areas alert to be defined.



Select "**Confirm**".



This series of alerts and displays is only available if Risk areas have first been downloaded and installed on the system.

Traffic

Traffic information

Display of messages



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Traffic messages**".

Choose filter settings for:



"**On the route**",



"**Around**",



"**Near destination**", filters to fine-tune the list of messages.

Press again to remove the filter.



Select the message from the list offered.



Select the magnifying glass to have voice information.

i TMC (Traffic Message Channel) messages on GPS-Navigation contain traffic information transmitted in real time.

Setting filters



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Traffic options**".



Select:

- "**Be advised of new messages**",
- "**Speak messages**".

Then enter the filter radius.



Select "**Confirm**".



We recommend a filter radius of:

- 12 miles (20 km) in urban areas,
- 30 miles (50 km) on motorways.

Receiving TA messages



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Voice**".

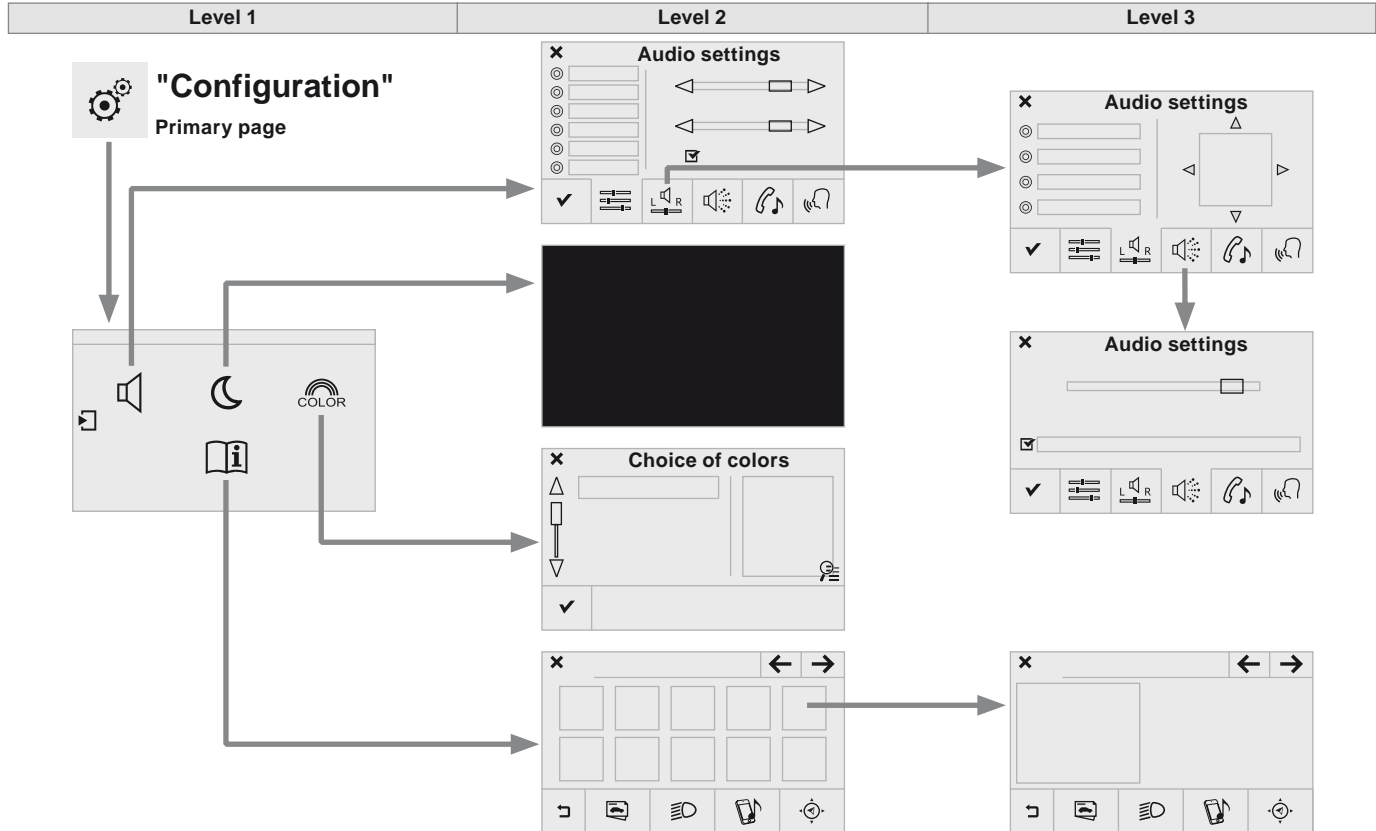
Off On



 
 


 
















Activate / Deactivate "**Traffic (TA)**".

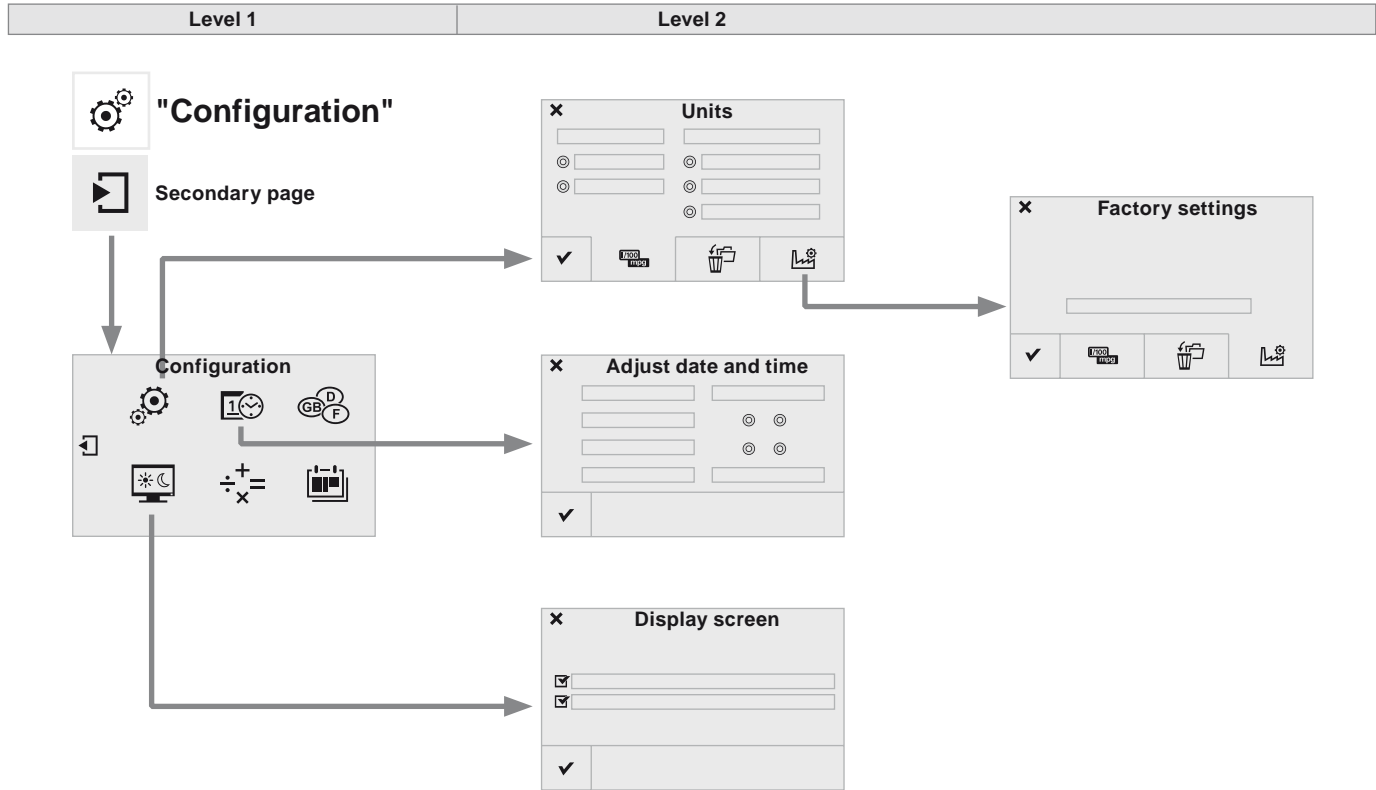











 





The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

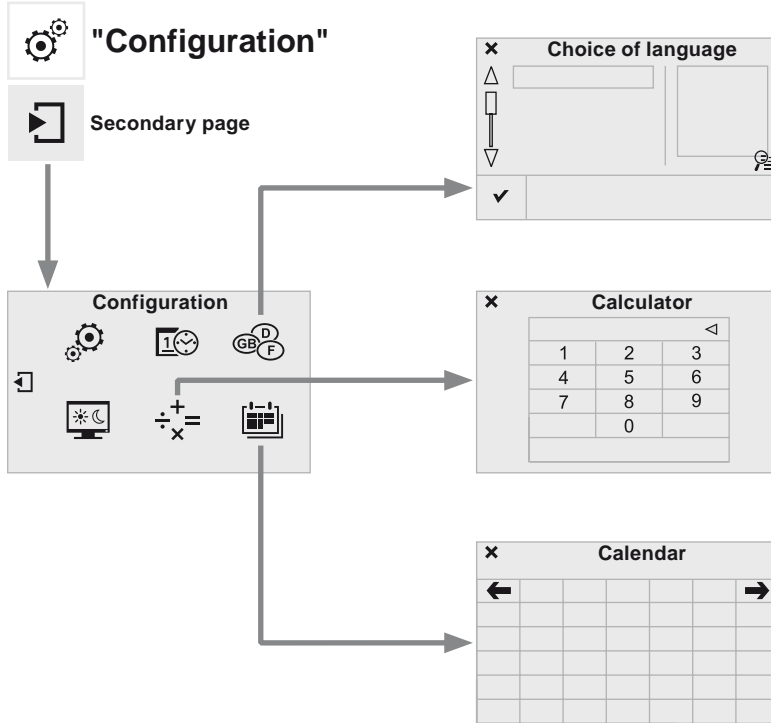
Configuration






 





Level 1		Level 2		Level 3	Comments
 	Configuration ↓ Audio settings		Ambience		Choose the sound ambience.
			Balance		Set the position of the sound in the vehicle using the Arkamys® system.
			Sound effects		Choose the volume or activate the link to vehicle speed.
			Ringtones		Choose the telephone ringtone and volume.
			Voice		Choose the volume for the voice and announcement of street names.
			Confirm		Save the settings.
 	Configuration ↓ Turn off screen				Turns off the display (black screen). Pressing the black screen restores the display.
 	Configuration ↓ Color schemes		Confirm		After choosing the color scheme, save the setting.
 	Configuration ↓ Interactive help		Go back		Consult the Interactive help.
			Driving assistance - Equipment		
			Warning lamps		
			Audio communication		
			GPS Navigation		
			Previous page		
			Next page		



Level 1		Level 2		Comments
  	Configuration ↓ Secondary page ↓ System Settings		Units	Set the units used to display distance, fuel consumption and temperature.
			Delete data	Select the desired data in the list then press Delete.
			Factory settings	Return to factory settings.
			Confirm	Save the settings.
  	Configuration ↓ Secondary page ↓ Time/Date		Confirm	Set the date and time then confirm.
  	Configuration ↓ Secondary page ↓ Screen settings	<input checked="" type="checkbox"/>	Activate automatic text scrolling	Make the setting then confirm.
	<input checked="" type="checkbox"/>	Activate animations		
		Confirm		



Level 1		Level 2		Comments
  	Configuration ↓ Secondary page ↓ Languages	✓	Confirm	Select the language then confirm.
  	Configuration ↓ Secondary page ↓ Calculator			Select the calculator.
  	Configuration ↓ Secondary page ↓ Calendar			Select the calendar.

Audio settings



Press on **Configuration** to display the primary page.



Select "**Audio settings**".



Select "**Ambience**" or "**Balance**" or "**Sound effects**" or "**Ringtones**" or "**Voice**".



! The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle. Available only with the 6-speaker configuration.

i On-board audio: Arkamys® Sound Staging optimises sound distribution in the passenger compartment.

! The audio settings (**Ambience**, **Bass**, **Treble**: and **Loudness**) are different and independent for each sound source. The settings for **Distribution** and **Balance** are common to all sources.

- !**
- "**Ambience**" (choice of 6 musical ambiances)
 - "**Bass**:"
 - "**Treble**:"
 - "**Loudness**" (Activate/Deactivate)
 - "**Balance**" ("**Driver**", "**All passengers**", "**Front only**")
 - "**Audible response from touch screen**"
 - "**Volume linked to speed**" (Activate/Deactivate)

Color schemes



Press on **Configuration** to display the primary page.



Select "**Color schemes**".



Select the colour scheme in the list, then "**Confirm**".

i At each change of colour scheme the system restarts, showing a black screen for a few moments.

! As a safety measure, the procedure for changing the color scheme is only possible with the vehicle stationary.

Interactive help



Press on **Configuration** to display the primary page.



Select "**Interactive help**".

i The "Interactive help" included in the system is not intended to be a substitute for the more complete content of the printed handbook.

! As a safety measure, consultation of the handbook is only possible with the vehicle stationary.

System

Modify system settings



Press on **Configuration** to display the primary page then go to the secondary page.



Select "**System Settings**".



Select "**Units**" to change the units of distance, fuel consumption and temperature.



Select "**Delete data**" to delete the list of recent destinations, personal points of interest, contacts in the list. Choose the item then select "**Delete**".



Select "**Factory settings**" to return to the original settings.



Press on **Configuration** to display the primary page then go to the secondary page.



Select "**Screen settings**".



Activate or deactivate "**Activate automatic text scrolling**" and "**Activate animations**".



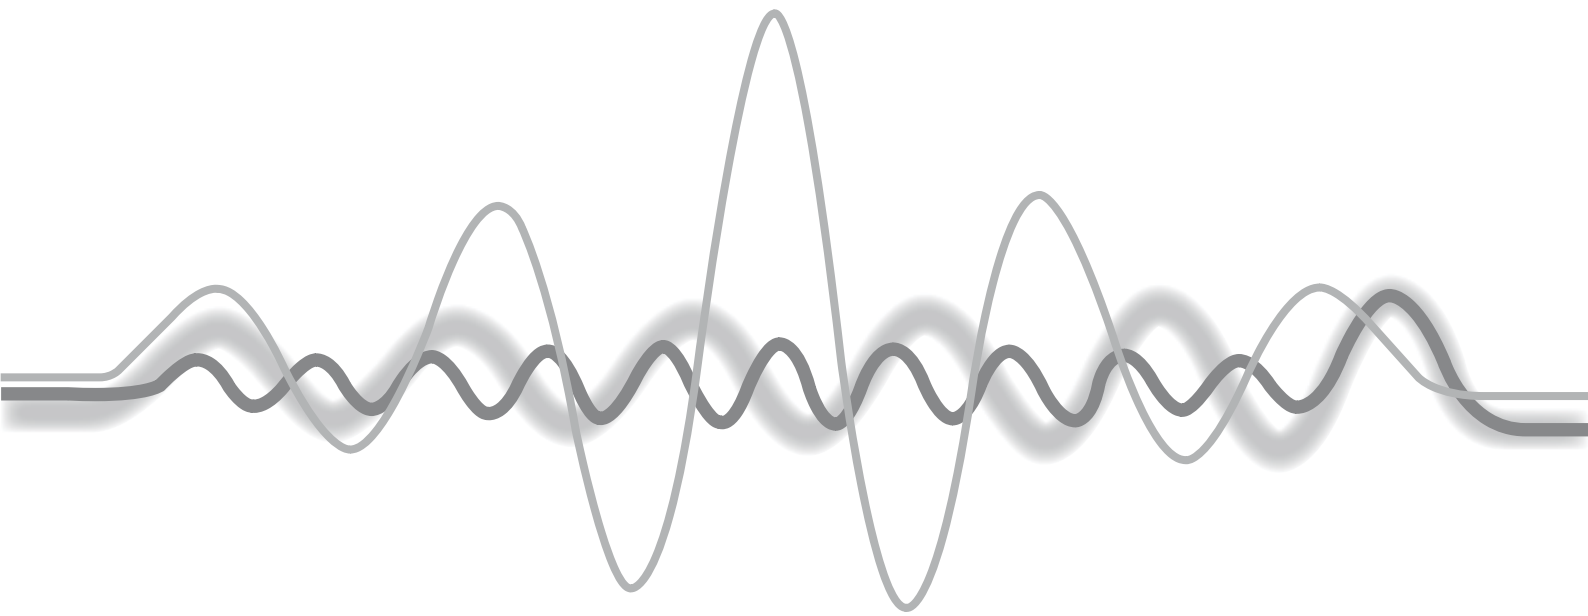
Press on **Configuration** to display the primary page then go to the secondary page.




Select:

- "**Time/Date**" to change the time zone, synchronisation with GPS, the time and its format and then the date.
- "**Languages**" to change the language.
- "**Calculator**" to display a calculator.
- "**Calendar**" to display a calendar.





Connected services

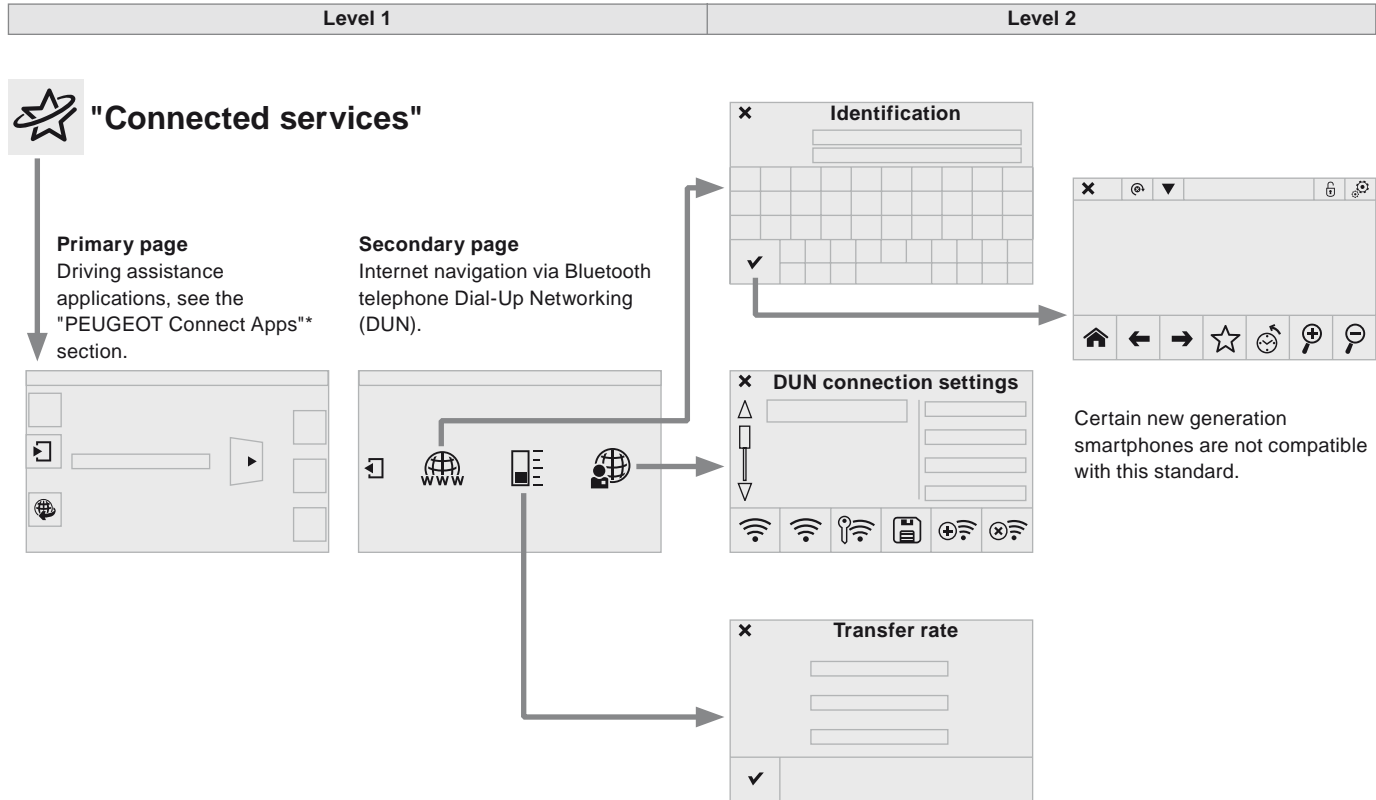

* Depending on country.

PEUGEOT Connect Apps

! "PEUGEOT Connect Apps" is a service providing driving aid applications in real time; it gives access to useful information such as the state of the traffic, danger zones, fuel prices, the availability of parking places, tourist sites, weather conditions, correct addresses...

It includes access to the mobile network associated with the use of these applications. "PEUGEOT Connect Apps" is a service available under subscription contract from PEUGEOT dealers, depending on country and the type of touch screen, both before and after delivery of a new vehicle.

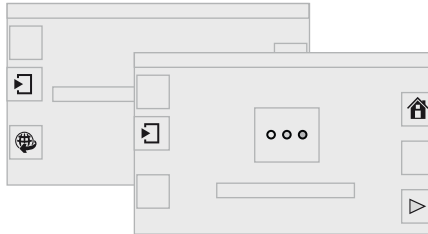


Plug the "PEUGEOT Connect Apps" connection key into the USB port.

* Depending on country.



Press on the "Connected services" menu to display the applications.




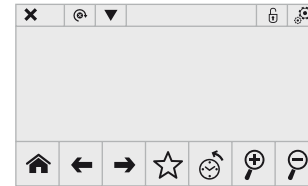These applications use vehicle data such as the current speed, mileage, remaining fuel range or even GPS position to provide pertinent information.

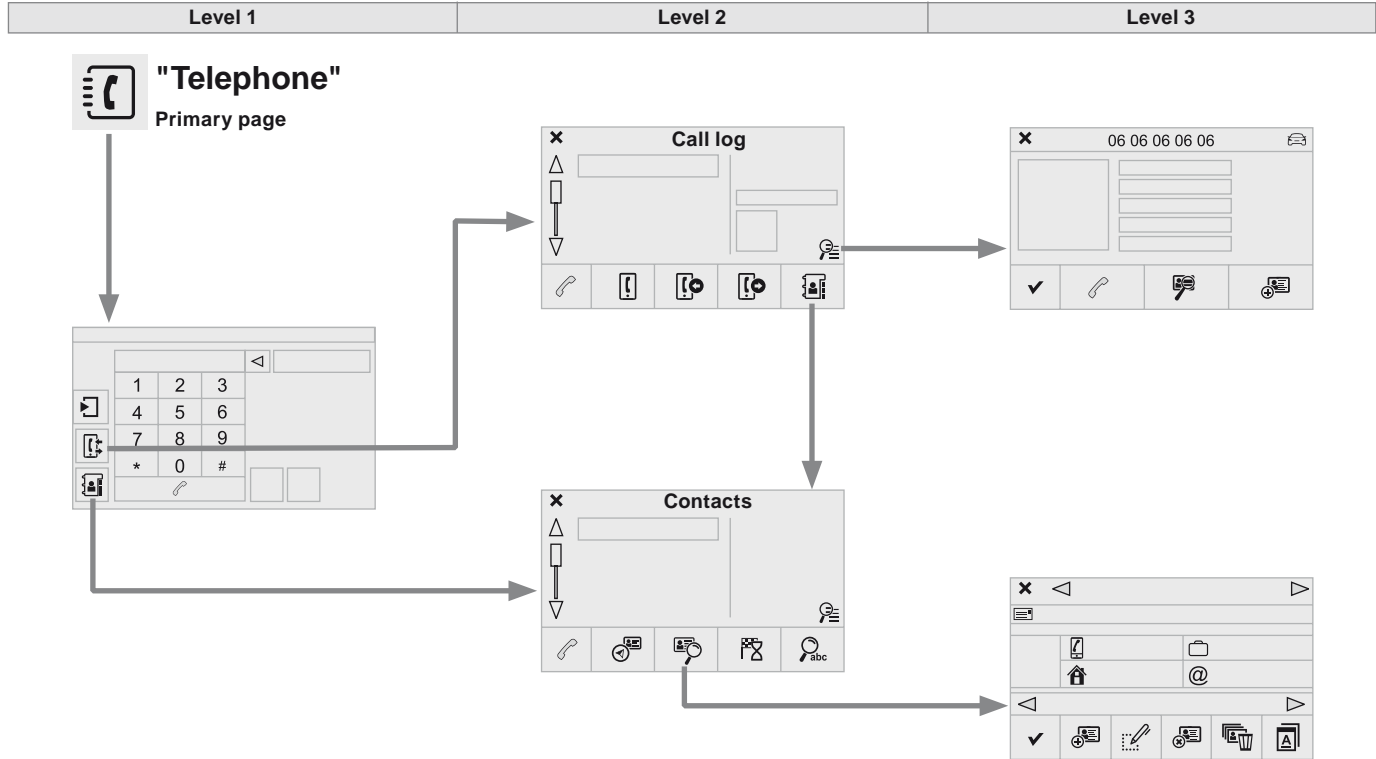

















 







As a safety measure, some functions can only be used when stationary.

 











 






The "MyPEUGEOT" application is a link between the user, the manufacturer and its dealer network. It allows the customer to know everything about their vehicle: servicing plan, accessory range, service contracts taken out, ... It also makes possible the sending of the vehicle's mileage to the "MyPEUGEOT" site, or to identify a dealer.



Telephone



Level 1		Level 2		Level 3		Comments
 	Telephone ↓ Call log	 All calls				After making choices, start the call.
		 Incoming calls				
		 Outgoing calls				
		 Contacts				
		 Magnifying glass	 View			
			 Create			
 Call						
 	Telephone ↓ Contacts	 Addresses				After making choices, start the call.
		 View	 Create			
			 Modify			
			 Delete			
			 Delete all			
			 By name			
			 Confirm			
		 Navigate to				
		 Search for contact				
 Call						

Level 1		Level 2		Level 3		Comments
  	Telephone connection ↓ Secondary page ↓ Bluetooth connection	 Search				Start the search for another peripheral device to connect.
		 Disconnect				Stop the Bluetooth connection to the selected peripheral device.
		 Update				Import the contacts from the selected telephone to store them in the audio system.
		 Delete				Delete the selected telephone.
		 Confirm				Save the settings.
  	Telephone connection ↓ Secondary page ↓ Search for devices			<input checked="" type="checkbox"/> Telephone		Start the search for peripheral devices.
			Devices detected	<input checked="" type="checkbox"/> Audio streaming		
				<input checked="" type="checkbox"/> Internet		
  	Telephone connection ↓ Secondary page ↓ Telephone Options	 Put on hold				Cut the microphone temporarily so that the contact cannot hear your conversation with a passenger.
		 Update				Import the contacts from the selected telephone to save them in the audio system.
		 Ringtones				Choose the telephone ringtone and volume.
		 Memory info.				Contact records used and free, percentage of storage space used by internal contacts and Bluetooth contacts.
		 Confirm				Save the settings.

Pairing a Bluetooth® telephone

! For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio system must be carried out with the **vehicle stationary**.

Procedure (short) from the telephone

In the Bluetooth menu of your device, select the system name in the list of devices detected.

Enter a code of at least 4 figures in the device and confirm.

✓ Enter this same code in the system, select **"OK"** and confirm.

Procedure from the system

Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).



Press on **Telephone** to display the primary page.



Press on the secondary page.



 
Select **"Bluetooth connection"**.



Select **"Search for devices"**.
The list of telephones detected is displayed.



If the telephone is not detected, it is recommended that you switch the Bluetooth function on your telephone off and then on again.



Select the name of the desired peripheral from the list and **"Confirm"**.



Enter a code of at least 4 figures for the connection then **"Confirm"**.

Enter this same code in the telephone then accept the connection.

The system offers to connect the telephone:

 
- in **"Telephone"** (hands-free kit, telephone only),
- in **"Audio streaming"** (streaming: wireless playing of audio files from the telephone),
- in **"Internet"** (internet browsing, only if your telephone is compatible with the "DUN" Dial-Up Networking Bluetooth standard).

Select one or more profiles and confirm.

! The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.

! The ability of the system to connect with only one profile depends on the telephone. The three profiles may all connect by default.

Visit www.peugeot.co.uk for more information (compatibility, additional help, ...).



The recognised telephone appears in the list.

Depending on your telephone, you may be asked to accept automatic connection every time the ignition is switched on.

! Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



If not, select "**Update**".

On return to the vehicle, if the last telephone connected is present again, it is reconnected automatically and within around 30 seconds after switching on the ignition the pairing is done without any action on your part, with (Bluetooth activated).

To modify the automatic connection mode, select the telephone in the list then select the desired profile.

Connecting a Bluetooth® peripheral device

Automatic reconnection

On switching on the ignition, the telephone connected when the ignition was last switched off is automatically reconnected, if this connection mode had been activated during the pairing procedure.

The connection is confirmed by the display of a message and the name of the telephone.

Manual connection



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripherals.

Select the peripheral to connect.



Press on "**Search for devices**".

The connection is confirmed by the display of a message and the name of the telephone.

Managing paired telephones

i This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripheral devices.

Select the peripheral in the list.



Select "**Search for devices**"

Or



"**Connect / Disconnect**" to start or end the Bluetooth connection with the selected device.

Or



"**Delete**" to delete the pairing.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted **TEL** button to accept an incoming call.



Make a long press



on the steering mounted **TEL** button to reject the call.

Or



Select "**End call**".

Making a call

! Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

Calling a new number



Press on **Telephone** to display the primary page.



Enter the phone number using the digital keypad. Press "**Call**" to start the call.

Calling a contact



Press on **Telephone** to display the primary page.



Or make a long press



on the steering mounted **TEL** button.



Select "**Contacts**".

Select the desired contact from the list offered.



Select "**Call**".

Calling a recently used number



Press on **Telephone** to display the primary page.



Select "**Call log**".

Select the desired contact from the list offered.



It is always possible to make a call directly from the telephone; park the vehicle first as a safety measure.

Managing contacts / entries



Press on **Telephone** to display the primary page.



Select "**Contacts**".



Select "**View**".



Select "**Create**" to add a new contact.

Or



"**Modify**" to edit the selected contact.

Or



"**Delete**" to delete the selected contact.

Or



"**Delete all**" to delete all information for the selected contact.



Select "**By name**" to view the list of contacts.

Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

Navigation

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The route settings may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the route settings in the "Navigation" menu.
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The Risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the "Navigation" menu.
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Information" function in the list of route settings.
I receive a Risk areas alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for Risk areas located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk areas. Select "On the route" to no longer receive alerts other than navigation instructions or to reduce the time for the announcement.

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely so that there is GPS coverage by at least 4 satellites.
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.

Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	Press and hold the "List" button at the steering mounted controls to update the list of stations received or press on the system update function: "Update list".
The name of the radio station changes.	Some radio stations send other information in place of their name (the title of the song for example).	
	The system interprets this information as the name of the station.	

Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as a telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.	Check that the CD is inserted in the player the right way up. Check the condition of the CD: the CD cannot be played if it is too badly damaged. Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section. The audio system's CD player does not play DVDs. Some recorded CDs will not be played by the audio system because they are not of adequate quality.
	The CD has been recorded in a format that is not compatible with the player (udf...).	
	The CD is protected by an anti-pirating protection system which is not recognised by the audio system.	
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.

QUESTION	ANSWER	SOLUTION
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	


Settings

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources.	For optimum sound quality, the audio settings for Loudness, Ambience, Treble, Bass, Volume can be adapted to the different sound sources, which may result in audible differences when changing source.	Check that the audio settings (Loudness, Ambience, Treble, Bass, Volume) are adapted to the sources listened to. Adjust Balance, Treble and Bass to the middle position, select the "None" musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the state of charge of the battery. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.


Telephone

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	Check that your telephone's Bluetooth function is switched on. Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at www.peugeot.co.uk (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down...).
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	

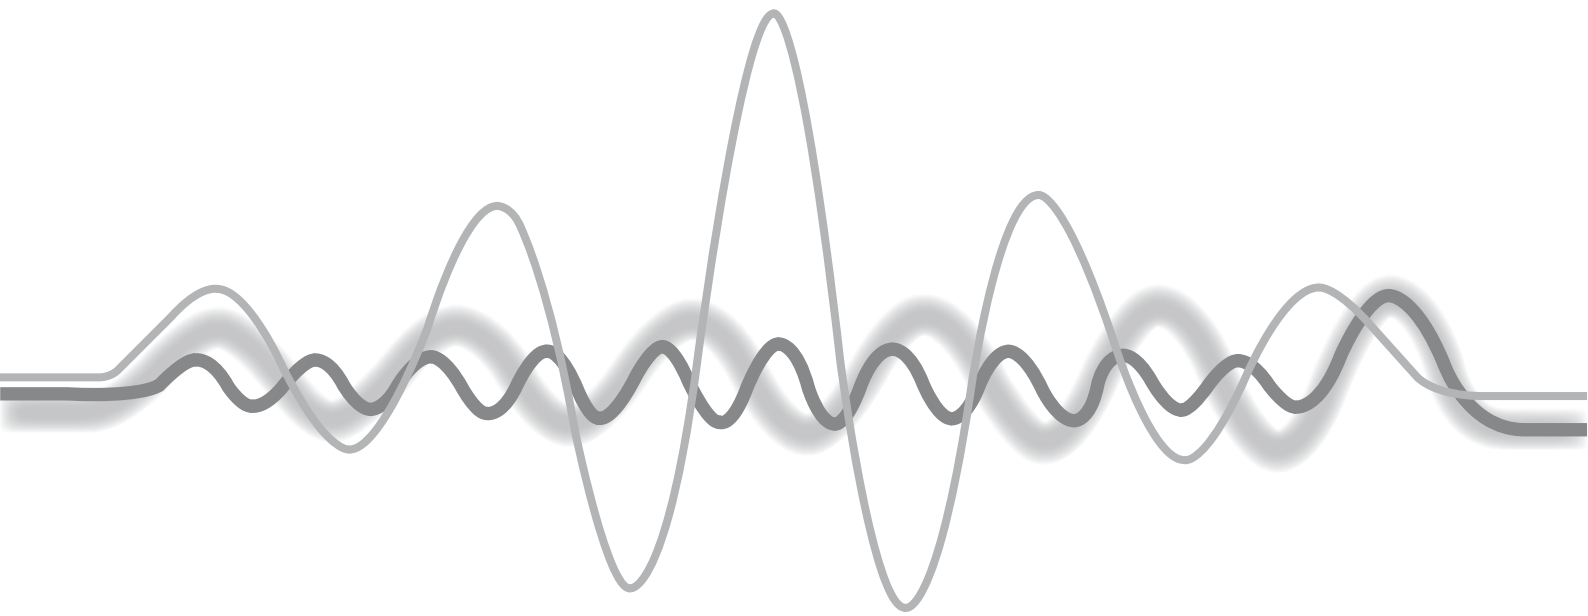

PEUGEOT Connect Sound (RD5)

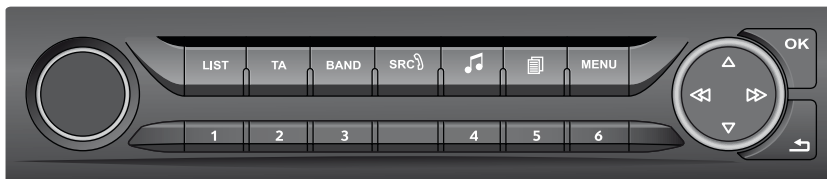Audio system / Bluetooth®




	Contents
First steps	360
Steering mounted controls	361
Menus	362
Radio	362
DAB (Digital Audio Broadcasting) radio	364
Media	366
Telephone	370
Screen menu map(s)	372
Frequently asked questions	375

i Your PEUGEOT Connect Sound (RD5) is coded in such a way that it will only operate in your vehicle.

! As a safety measure, the driver must only carry out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

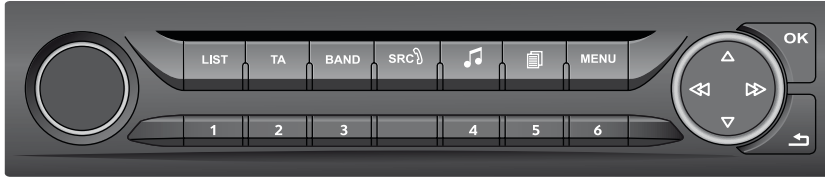First steps



On/off, volume setting.

LIST

Display the list of local stations.
Long press: CD tracks or MP3 folders (CD / USB).

TA

TA (Traffic Announcements) on/off.

BAND

Select wavebands FM, DAB and AM.

SRC

Select source:
Radio; audio CD / MP3 CD; USB;
Jack connection; Streaming; AUX.



Audio settings: front/rear fader, left/right balance, bass/treble, loudness, audio ambiances.



Select the screen display mode:
date, audio functions, telephone, Bluetooth, personalisation-configuration.

MENU

Display main menu.

1

Buttons 1 to 6:
Select a pre-set radio station.
Long press: pre-set a station.



Automatic frequency search down/up.
Select previous/next CD, MP3 or USB track.



Select next frequency down/up.
Select previous/next MP3 folder.
Select previous/next folder / genre / artist / playlist (USB).



Confirm.



Abandon the current operation.

Steering mounted controls



Radio: select the previous/next pre-set station.
 USB: select genre / artist / folder from the classification list.
 Select the previous/next item in a menu.



Radio: automatic search for a higher frequency.
 CD / MP3 / USB: select the next track.
 CD / USB: continuous press: fast forward.
 Move in the list.



Change audio source.
 Confirm a selection.
 Call/end call on the telephone.
 Press for more than 2 seconds: telephone main menu.



Radio: automatic search for a lower frequency.
 CD / MP3 / USB: select the previous track.
 CD / USB: continuous press: rewind.
 Move in the list.



Volume increase.



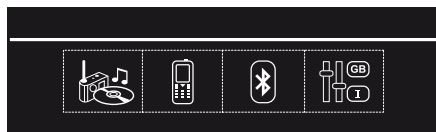
Volume decrease.



Mute: press the volume increase and decrease buttons simultaneously.
 The sound is restored by pressing one of the two volume buttons.

Menus

Screen C



Multimedia

Media parameters, Radio parameters.



Telephone

Call, Directory management,
Telephone management, Hang up.



Bluetooth connection

Connections management, Search
for a device.



Personalisation-configuration

Define the vehicle parameters,
Choice of language, Display
configuration, Choice of units, Date
and time adjustment.

Screen A



For a detailed global view of the menus
available, refer to "Screen menu map"
section.

Radio

Selecting a station



Press the **SRC** button repeatedly and
select the radio.



Press the **BAND** button to select a
waveband.



Briefly press one of the buttons to
carry out an automatic search of the
radio stations.



Press one of the buttons to carry out
a manual search up / down for radio
frequencies.



Press the **LIST** button to display the
list of stations received locally
(30 stations maximum).
To update this list, press for more
than two seconds.

RDS

i The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

MENU

Press the **MENU** button.



Select "**Audio functions**".

OK

Press **OK**.



Select the "**FM waveband preferences**" function.

OK

Press **OK**.



Select "**Activate RDS**".

OK

Press **OK**, RDS is displayed in the screen.

In "**Radio**" mode, press **OK** directly to activate / deactivate RDS mode.



RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of a station that can occur during a journey.

Receiving TA messages



The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

TA

Press the **TA** button to activate or deactivate traffic messages.

DAB (Digital Audio Broadcasting) radio

Display options:

if active but not available, the display will be struck out.



If the "DAB" station being listened to is not available on "FM", "DAB FM" is struck out.



Display the name of the current station.

Preset stations, buttons 1 to 6.
Short press: select the preset radio station.
Long press: preset a radio station.

Display the name of the multiplex service being used.

Represents the signal strength for the band being listened to.

Display of RadioText (TXT) for the current radio station.

Digital radio

i Digital radio provides a superior audio quality and also additional categories of traffic announcements (TA INFO). The different "multiplex services" offer a choice of radio stations in alphabetical order.

Change band (FM1, FM2, DAB, ...)

BAND



Change of station within the same "multiplex service".



Start a search for the next "multiplex service".

TA

Long press: select the desired categories of announcements from Transport, News, Entertainment and Flash special (availability according to the station).

i When the radio station is displayed in the screen, press on "**OK**" to display the contextual menu. (Frequency hopping (RDS), DAB / FM auto tracking, RadioText (TXT) display, Information on the station, ...)

DAB / FM tracking

i "DAB" does not have 100% coverage of the country. When the digital signal is weak, "DAB / FM auto tracking" allows you to continue listening to the same station, by automatically switching to the corresponding analogue "FM" station (if it exists).

MENU

Press the "**Menu**" button.



Select "**Multimedia**" and confirm.



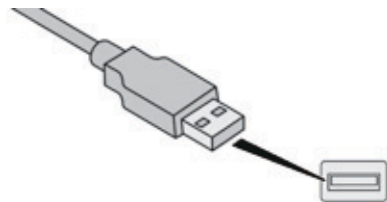
Select "**DAB / FM auto tracking**" and confirm

i If "DAB / FM auto tracking" is on, there will be a difference of a few seconds in the programme when the system changes to analogue "FM" radio, with sometimes a variation in volume. When the strength of the digital signal is good again, the system automatically switches back to "DAB".

! If the "DAB" station you are listening to is not available on "FM" ("**DAB/FM**" option barred), or if "DAB / FM auto tracking" is not on, the sound will be cut when the digital signal is too weak.

Media

USB player



Insert a USB memory stick into the USB port or connect a USB peripheral device to the USB port using a suitable cable (not supplied).

! To protect the system, do not use a USB hub.

The system builds playlists (temporary memory), which can take from a few seconds to several minutes on the first connection. Reducing the number of non-music files and the number of folders reduces this waiting time. Playlists are updated every time the ignition is switched off or a USB memory stick is connected. The lists are memorised: if the lists are not changed, the subsequent loading time is reduced.

LIST

Press and hold **LIST** to display the different classifications.



Select by "**Folder**" / "**Artist**" / "**Genre**" / "**Playlist**".

OK

Press **OK** to select the classification required, then press **OK** again to confirm.

LIST

Press **LIST** briefly to display the previously selected classification.



Navigate through the list using the left/right and up/down buttons.

OK

Confirm the selection by pressing **OK**.



Press one of these buttons to gain access to the previous / next track in the list.

Press and hold one of the buttons for fast forward or rewind.



Press one of these buttons to gain access to the previous / next "**Folder**" / "**Artist**" / "**Genre**" / "**Playlist**" in the list.

Auxiliary socket (AUX)



Connect the portable device (MP3 player, ...) to the auxiliary Jack socket using an audio cable (not supplied).

Press the **SOURCE** button several times in succession and select **AUX**.

First adjust the volume on your portable device (to a high level). Then adjust the volume on your audio system. Operation of controls is via the portable device.

! Do not connect a device to both the Jack auxiliary socket and the USB port at the same time.

CD player

Insert circular compact discs only. Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the vehicle's player. Insert a CD in the player, play begins automatically.

SRC 

To play a disc which has already been inserted, press the **SOURCE** button several times in succession and select **CD**.



Press one of the buttons to select a track on the CD.

LIST

Press the **LIST REFRESH** button to display the list of tracks on the CD.



Press and hold one of the buttons for fast forward or rewind.

Playing an MP3 CD compilation

Insert an MP3 compilation in the CD player. The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.

! On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played. While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

SRC / 

To play a disc which has already been inserted, press the **SOURCE** button several times in succession and select "**CD**".



Press one of the buttons to select a folder on the CD.



Press one of the buttons to select a track on the CD.

LIST

Press the **LIST** button to display the list of directories of the MP3 compilation.



Press and hold one of the buttons for fast forward or backward play.

Information and advice

The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u, etc.) can be played.

It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.

In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.

Use only USB memory sticks formatted FAT32 (File Allocation Table).

! To protect the system, do not use a USB hub.

i It is recommended that you use genuine Apple® USB cables for correct operation.

Bluetooth® audio streaming

Streaming allows music files on the telephone to be played via the audio system.

Connect the telephone: see the "**Telephone**" section.

Select in the "**Bluetooth: Telephone - Audio**" menu the telephone to be connected. The audio system connects to a newly paired telephone automatically.

SRC / Activate the streaming source by pressing the **SOURCE*** button.

Control of tracks to be played is via the buttons on the audio system control panel and the steering mounted controls**. The contextual information can be displayed in the screen.

* In certain cases, play of the audio files must be initiated from the keypad.

** If the telephone supports the function.

Connecting Apple® players

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Control is via the audio system.

The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).

The version of software in the audio system may not be compatible with the generation of your Apple® player.

Telephone

Pairing a Bluetooth® telephone

Screen C

(Available according to model and version)

! As a safety measure and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.

Go to www.peugeot.co.uk for more information (compatibility, more help, ...).

Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).

MENU

Press the **MENU** button.



In the menu, select:

- "Bluetooth: Telephone - Audio"
- "Bluetooth configuration"
- "Perform a Bluetooth search"

A window is displayed with a message that a search is in progress.



The services available depend on the network, the SIM card and the compatibility of the Bluetooth device used.
Consult your telephone's manual and your operator to find out which services are available to you.

The first 4 telephones recognised are displayed in this window.

The "**Telephone**" menu permits access to the following functions in particular: "**Directory**", "**Calls list**", "**Consult the paired equipment**".

Select the telephone to be connected from the list. Only one telephone can be connected at a time.



A virtual keypad is displayed in the screen: enter a code with at least 4 digits.

OK

Confirm by pressing **OK**.

A message in the screen indicates the telephone chosen. To accept the pairing, enter the same code on the telephone, then confirm with **OK**. If pairing fails, the number of attempts is not limited.

A message that the pairing has been successful appears in the screen.

The automatic connection authorised is only active after the telephone has been configured. The directory and the call list can be accessed after the necessary synchronisation period.

* If your telephone is fully compatible.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Select the **YES** tab on the display using the buttons.

OK

Confirm by pressing **OK**.



Press this button at the steering mounted controls to accept the call.

Making a call

From the "**Bluetooth: Telephone - Audio**" menu.

Select "**Manage the telephone call**".

Select "**Call**".

Or

Select "**Calls list**".

Or

Select "**Directory**".



Press this button for more than two seconds for access to your directory, then navigate using the thumbwheel.

Or

To dial a number, use your telephone's keypad, with the vehicle stationary.

Ending a call



During a call, press this button for more than 2 seconds.

Confirm with **OK** to end the call.



The system accesses the telephone's contacts directory, depending on its compatibility, and while it is connected by Bluetooth.



With certain telephones connected by Bluetooth you can send a contact to the directory of the audio system. Contacts imported in this way are saved in a permanent directory visible to all, whatever the telephone connected.

The menu for the directory is not accessible if it is empty.

Screen menu map(s)

Screen A

Radio-CD

- 1
- 2 RDS options
- 2 REG mode
- 2 CD repeat
- 2 Shuffle play

Vehicle config*

- 1
- 2 R wiper in rev
- 2 Guide lighting

Options

- 1
- 2 Diagnostic
- 3 View
- 3 Abandon

Units

- 1
- 2 Temperature: °Celsius / °Fahrenheit
- 2 Fuel consumption: KM/L - L/100 - MPG
- 2

Display adjust

- 1
- 2 Year
- 2 Month
- 2 Day
- 2 Hour
- 2 Minutes
- 2 12 H/24 H mode

Language

- 1
- 2 Français
- 2 Italiano
- 2 Nederlands
- 2 Português
- 2 Português do Brasil
- 2 Deutsch
- 2 English
- 2 Español
- 2 Čeština
- 2 Hrvatski
- 2 Magyar

* The settings vary according to the trim level of the vehicle.

Screen C

MEDIA

- 1 **Media parameters**
- 2 **Choice of playback mode**
 - 3 Normal
 - 3 Random
 - 3 Random all
 - 3 Repeat
- 2 **Choice of track listing**
 - 3 By folders
 - 3 By artists
 - 3 By genres
 - 3 By playlists
- 1 **Radio parameters**

TELEPHONE

- 1 **Call**
 - 2 Dial
 - 2 Directory
 - 2 Calls list
 - 2 Voice mail box
- 1 **Directory management**
 - 2 Consult an entry
 - 2 Delete an entry
 - 2 Delete all entries
- 1 **Telephone management**
 - 2 Telephone status
- 1 **Hang up**

BLUETOOTH CONNECTION

- 1 **Connections management**
 - 1 Search for a device

PERSONALISATION - CONFIGURATION

1 Define the vehicle
parameters*

1 Choice of language

1 Display configuration

2 Choice of units

2 Date and time adjustment

2 Display parameters

2 Brightness

1 Choice of sounds

* Depending on vehicle equipment.

Frequently asked questions

The table below gives answers to the most frequently asked questions on your audio system.

QUESTION	ANSWER	SOLUTION
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the state of charge of the battery. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction in volume or CD play stopping.	Switch the audio system off for a few minutes to allow the system to cool.

Radio

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the audio functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, underground car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through an automatic car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for another frequency giving better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.

Media

QUESTION	ANSWER	SOLUTION
The message "USB peripheral error" is displayed on the screen. The Bluetooth connection is cut.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
	The USB memory stick is not recognised. The USB memory stick may be corrupt.	Reformat the USB memory stick.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

Telephone

QUESTION	ANSWER	SOLUTION
I am unable to access my voicemail.	Few telephones or service providers allow the use of this function.	